

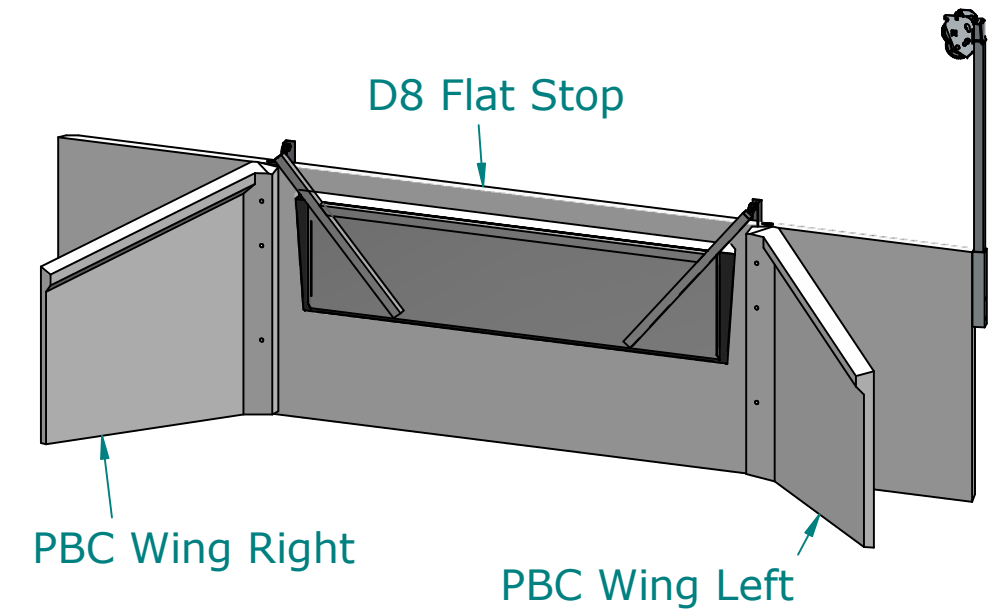


Top view

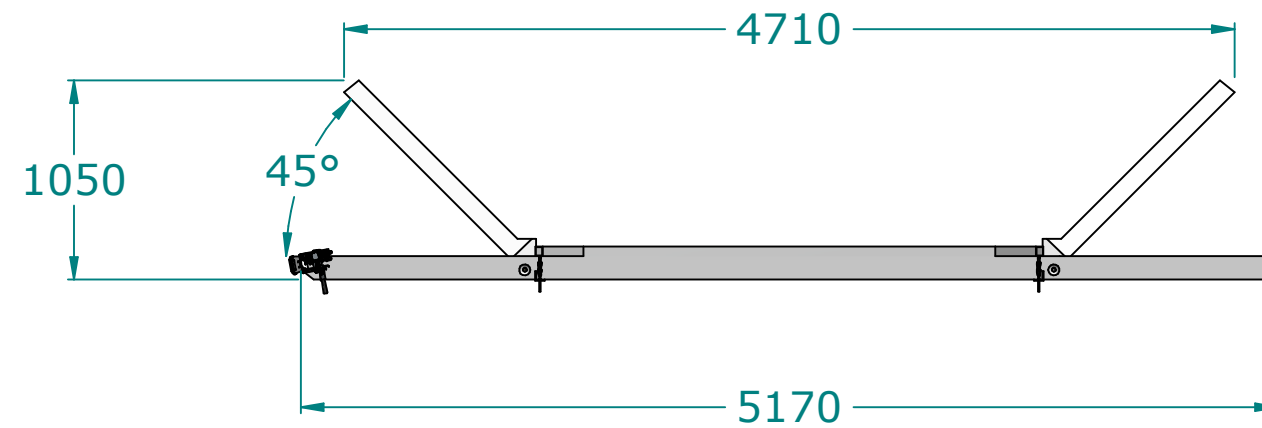

D8 Flat Stop Rev2 - PBC Wings
Downstream view

Height from the top
of the closed door to
D8 Flat Stop sill level

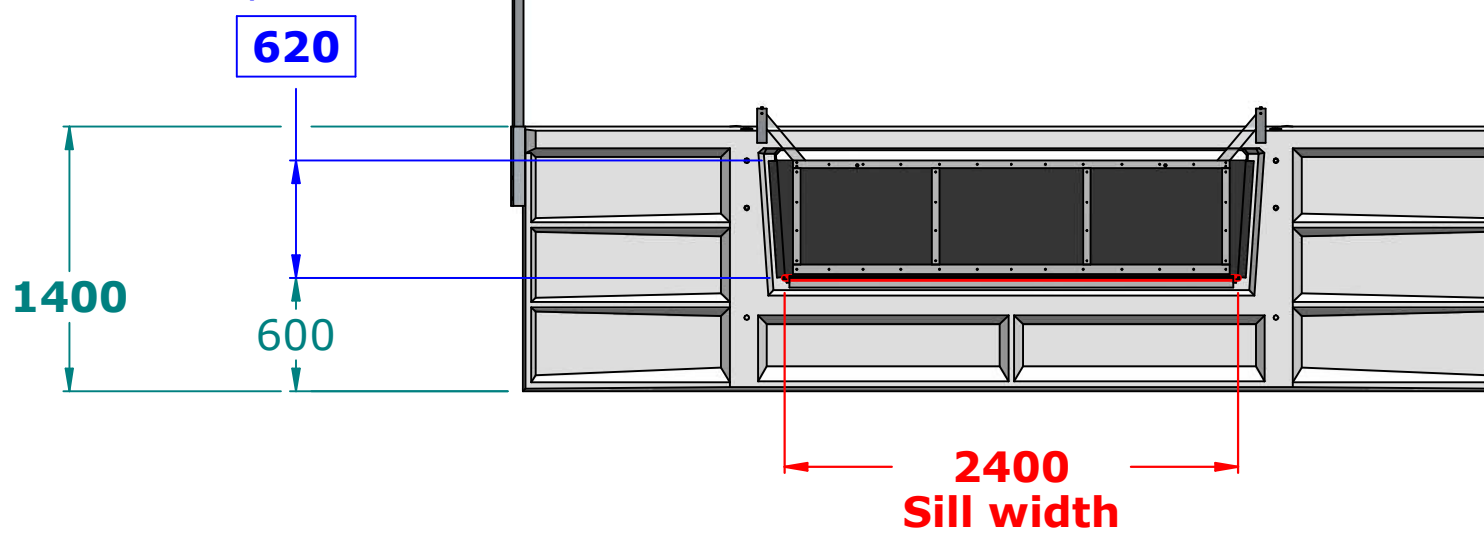

Upstream view

- Recommended is 100mm of freeboard
on the upstream side of the rubber door.

D8 Flat Stop - PBC Wings

© Padman Stops. This document is and shall remain the property of Padman Stops. Unauthorised use of this document in any form is prohibited. Patents may apply.

All dimensions in millimetres
unless otherwise stated.

info@padmanstops.com.au
tel. 03 5874 5282

